

## 1. Seat Height



Lift the front lever on the right-hand side and take your weight off the seat to raise the height. Remain seated to lower the height. Release the lever to lock the seat height.

## 2. Back Angle



Lift the back lever on the right-hand side and take your weight off the back to bring it forward. Lean back to move it backwards. Release the lever to lock the back angle.

## 3. Free Float Activation



Rotate the middle lever on the right-hand side anti-clockwise to activate the seat rock. Rotate the lever clockwise to lock the seat in any position.

## 4. Free Float Tension




Twist the knob on the underside of the chair while in seat rock mode to adjust the tension of the rocking motion. Clockwise increases the tension, anti-clockwise reduces the tension.

## 5. Back Height



Lift the lever on the back to release the back height lock, and raise or lower the back. Push the lever down to lock the back height.

## 6. Lumbar Pump (If fitted)

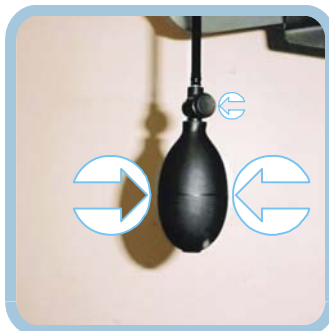

Squeeze the bulb repeatedly to inflate the lumbar support. Press the button on the bulb to deflate the lumbar support.

## 7. Seat Depth



Push in the button on the left-hand side and slide the seat backward or forward. Release the button to lock the seat depth.

## 8. Arm Rest (If fitted) Height



Push in and hold the button on the arm post to release the arm height lock. Raise or lower the arm. Release the button to lock the arm height. Repeat for the other arm.

See an animation of RH Logic 3 adjustments at:

<http://www.ergonomics.co.uk/products/seating/seating10.htm>  
or

See an animation of RH Logic 4 adjustments at:

<http://www.ergonomics.co.uk/products/seating/seating11.htm>

## 9. Arm Type A (If Fitted) Depth



Push in the button on the inside of the arm-top and slide the arm-top forward or backward. Release the button to lock the arm rest depth. Repeat for the other arm.

## Arm Type B (If Fitted) Pivot Arm Adjustment



Rotate the arm until it locks at the desired position. Repeat for the other arm.

## 10. Arm Rest Width



Rotate the lever at the base of the arm to loosen the arm width lock. Slide the whole arm in or out. Rotate the lever back again to lock the arm. Repeat for the other arm.

## 11. Head/Neck Rest (RH/4 Only - If Fitted)



Pull the head/neck-rest post up to raise the height or push it down to lower the height. Rotate the cushion up or down for varying support.

## 12. Head/Neck Rest Height Tension (RH/4 Only)



Adjust the head/neck-rest height tension if the headrest slips or is difficult to move up or down.

To do this, remove the circular black cap in the middle upper section of the chair back to expose the bolt. An allen key is clipped to the plastic housing under the front of the chair, use this to tighten or loosen the bolt as required.

For further assistance please call  
Customer Services on  
0845 345 0898